

User Manual

3.5mm Coaxial Calibration Kit

DC to 26.5 GHz

Models: FMCK1019
FMCK1020



FMCK1019



FMCK1020

Fairview Microwave
301 Leora Ln., Suite 100. Lewisville, TX 75056
Tel: 1-800-715-4396 or (972) 649-6678
Fax: (972) 649-6689
sales@fairviewmicrowave.com | tech_support@fairviewmicrowave.com

Warranty

Fairview Microwave hardware products are warranted against defects in materials and workmanship for a period of one year from the date of shipment. During the warranty period, Fairview Microwave will, at its option, either repair or replace products which prove to be defective.

Fairview Microwave software products are warranted against defects in material and workmanship of the media on which the product is supplied for a period of ninety (90) days from the date of shipment. Fairview Microwave also warrants that the product shall operate substantially in accordance with published specifications during the same warranty period. During the warranty period, Fairview Microwave will, at its option, either repair or replace products which prove to be defective. Fairview Microwave does not warrant that the operation of the product shall be uninterrupted or error-free.

For warranty service or repair, all products must be returned to Fairview Microwave and must be issued a return authorization number by Fairview Microwave prior to shipment. Buyer shall prepay shipping charges to Fairview Microwave. Obligation is limited to the original Buyer.

Limitation of Warranty

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by the Buyer, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or wear resulting from normal use. No other warranty is expressed or implied. Fairview Microwave specifically disclaims the implied warranties of merchantability and fitness for a particular purpose.

The remedies provided herein are the Buyer's sole and exclusive remedies. Fairview Microwave shall not be liable for any direct, indirect, special, incidental, or consequential damages whatsoever (including, without limitation, damages for loss of business profits, business interruption, loss of business information, or any other financial loss) arising out of the Buyer's use of or inability to use the product, even if Fairview Microwave or an authorized Fairview Microwave dealer has been advised of the possibility of such damages.

Contents

Warranty	2
Limitation of Warranty	2
General Information	4
Calibration Kit Description	4
Maintenance	4
Calibration	4
Supporting Test Port Adapters	4
Electrostatic Discharge Precautions	4
Connector Description	5
Connector Care	5
Connector Tightening	6
Calibration Kit Contents	7
Standard Definitions	8
Resources	10
Datasheets	10
Website	10
Contacts	11
Customer Support & Sales	11

General Information

Calibration Kit Description

These Fairview Microwave 3.5mm coaxial calibration kits are designed to provide accurate calibrations of network analyzers in the DC to 26.5 GHz range. These kits include all the necessary calibration standards and associated hardware needed for the accurate calibration of most network analyzers. This manual applies to the following model numbers: FMCK1019 9-piece SOL (Short, Open, Load) calibration kit and FMCK1020 12-piece SOLT (Short, Open, Load, Through) calibration kit.

Refer to the [Calibration Kit Contents](#) section for information on included components and available kit options.

NOTE: This document, along with the kit data file and datasheet, can be downloaded from fairviewmicrowave.com.

Maintenance

This calibration kit is relatively maintenance-free, if the components are handled with the same care that is appropriate to all precision equipment. As with any precision component, proper care should be taken to ensure clean mating surfaces, correct alignment when mating, and proper torqueing of connectors. To help maintain the integrity of the components in the kit, routine visual inspection and cleaning of mating surfaces is recommended. Failure to do so may result in degraded repeatability and accuracy, as well as damage to any mated devices.

Calibration

To maintain and certify the calibration kit's ongoing performance to specification, we recommend that all kits be periodically returned to Fairview Microwave for calibration. The typical calibration cycle is one year, although actual needs may vary depending on usage.

Supporting Test Port Adapters

When configuring a test setup, ensure that damaging stresses are not applied to the connectors on the test set. This is particularly critical when the attached components are heavy or long. Always properly support the test port adapters being used.

Electrostatic Discharge Precautions

Protection against electrostatic discharge (ESD) is essential while inspecting, cleaning, or making connections to connectors attached to a static-sensitive circuit, such as those found inside test sets.

When handling the connectors on the test set, be aware that you are coming into contact with exposed center conductors that are connected directly to the static-sensitive internal circuits of the network analyzer. Ensure that you and your equipment are well-grounded before inspecting, cleaning, or making connections to test set ports. Standard ESD precautions, such as the use of grounded wrist straps and grounded antistatic mats, are recommended.

Connector Description

Precision 3.5mm connectors are miniature, instrument-grade, air-dielectric connectors that operate mode-free up to 26.5 GHz. They feature extremely low VSWR and insertion loss and are designed to non-destructively mate with standard 3.5mm connectors. These connectors generally have a high-performance support bead and comply with the proposed *IEEE Standard 287 for Precision Coaxial Connectors*.

Connector Care

Precision connectors must be handled carefully if accurate calibrations and measurements are to be obtained. All connectors should be inspected prior to each use. For optimal measurement results, all interfaces should be visually inspected under magnification and cleaned on a regular basis. Proper connector contact pin depths should also be verified through regular inspections using a connector gage kit to ensure that connectors on both calibration devices and devices under test (DUTs) have contact pin depths within recommended tolerances.

Care should be used whenever aligning connectors. Tighten connector coupling nuts using an appropriate torque wrench while holding the opposing connector with an open-end wrench.

When disconnecting devices, take care not to rock or bend any of the connections. Disconnect devices by disengaging the coupling nuts and gently pulling the connectors apart in a straight line.

Always use protective covers on all connectors when devices are not in use.

Should a connector become damaged, it should be repaired before it is used again or replaced immediately. A damaged connector can damage other mated connectors.

Connector Tightening

Damage to a calibration standard or attaching connector can occur if the device is turned instead of the connector's coupling nut. ALWAYS turn the coupling nut when making connections. Never turn or spin the connectors.


Always use a torque wrench (Fairview Microwave model ST-SMA-516-BO8A) to final-tighten all connections. This will ensure calibration accuracy and measurement repeatability.

When making connections, an open-end wrench is recommended to hold the body of one device stationary while torquing the nut on the other device or cable. This open-end wrench is supplied with the calibration kit for this purpose.

Using the torque wrench:

Hand-tighten the connection being torqued by holding the calibration device steady and turning only the coupling nut.

- Hold the torque wrench with your thumb and index finger, behind the groove in the handle (See *Figure 1.*).
- Tighten the connection until the ball in the handle crests on the cam (as the handle begins to break over). Do not “fully break” the handle of the torque wrench to reach the specified torque.
- Reverse the previous procedure to disconnect.

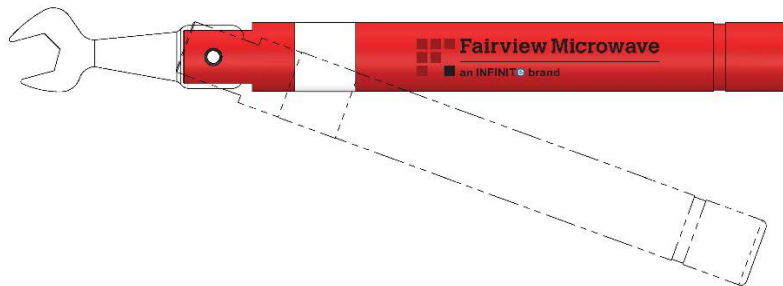

Torque wrench handle will break over when preset torque is achieved.
Take note of the wrench bit orientation relative to the direction of motion/rotation.

Calibration Kit Contents

Standard Components SOL – FMCK1019

1 ea	Short, female	FMSC3014
1 ea	Short, male	FMSC3015
1 ea	Open, female	FMSC3029
1 ea	Open, male	FMSC3030
1 ea	Load, female	FMTR1059
1 ea	Load, male	FMTR1060
1 ea	1/4" X 5/16" Open-End Wrench	FMTL1001
1 ea	7/16" X 1/2" Wrench	FMTL1002
1 ea	5/16" Torque Wrench	ST-SMA-516-BO8A

Standard Components SOLT – PECK1020

1 ea	Short, female	FMSC3014
1 ea	Short, male	FMSC3015
1 ea	Open, female	FMSC3029
1 ea	Open, male	FMSC3030
1 ea	Load, female	FMTR1059
1 ea	Load, male	FMTR1060
1 ea	Thru, female to female	FMAD1129
1 ea	Thru, male to male	FMAD1130
1 ea	Thru, male to female	FMAD1131
1 ea	1/4" X 5/16" Open-End Wrench	FMTL1001
1 ea	7/16" X 1/2" Wrench	FMTL1002
1 ea	5/16" Torque Wrench	ST-SMA-516-BO8A

Standard Definitions

Vector Network Analyzer hardware and test cables have a set of well understood systematic errors that affect the unprocessed measurements made by the instrument. The calibration standards in this kit have precisely-known electrical behavior, and during calibration the VNA software uses the raw measurement data and the known behavior of the standards to calculate the phase and magnitude of up to 12 complex error terms at each frequency point of the calibration. Once calibrated, the instrument applies Vector Error Correction to each data point measured.

Pasternack FMCK1019 and FMCK1020 3.5mm Calibration Kits Standards' Definitions				
Short (Male) FMSC3015				
	Rohde & Schwarz Units		Keysight & Anritsu Units	
Minimum Frequency	0	Hz		
Maximum Frequency	34	GHz		
Length	5.0017	mm		
Delay			16.684	ps
Loss	0.0038	dB/\sqrt{GHz}	1.3	GΩ/s
Short (Female) FMSC3014				
Minimum Frequency	0	Hz		
Maximum Frequency	34	GHz		
Length	5.0017	mm		
Delay			16.684	ps
Loss	0.0038	dB/\sqrt{GHz}	1.3	GΩ/s
Open (Male) FMSC3030				
Minimum Frequency	0	Hz		
Maximum Frequency	34	GHz		
Length	4.344	mm		
Delay			14.499	ps
Loss	0.0033	dB/\sqrt{GHz}	1.3	GΩ/s
C0	62.54	fF	62.54E-15	F
C1	-1.284	fF/GHz	-1284E-27	F/Hz
C2	0.1076	fF/GHz^2	107.6E-36	F/Hz ²
C3	-0.001886	fF/GHz^3	-1.89E-45	F/Hz ³
Open (Female) FMSC3029				
Minimum Frequency	0	Hz		
Maximum Frequency	34	GHz		
Length	4.4344	mm		
Delay			14.49	ps
Loss	0.0033	dB/\sqrt{GHz}	1.3	GΩ/s
C0	63.17	fF	63.17E-15	F
C1	-1.178	fF/GHz	-1178E-27	F/Hz
C2	0.1096	fF/GHz^2	109.60E-36	F/Hz ²
C3	-0.002146	fF/GHz^3	-2.15E-45	F/Hz ³

Through (Male/Female) Insertable Device, No Adapter		
Minimum Frequency	0	Hz
Maximum Frequency	34	GHz
Length	0	mm
Delay	0	ps
Loss	0	dB/\sqrt{GHz}
Through (Male/Male) FMAD1130 ⁽¹⁾		
Minimum Frequency	0	Hz
Maximum Frequency	34	GHz
Length	17.375	mm
Loss	0.0065	dB/\sqrt{GHz}
Through (Female/Female) FMAD1129 ⁽¹⁾		
Minimum Frequency	0	Hz
Maximum Frequency	34	GHz
Length	17.375	mm
Loss	0.0065	dB/\sqrt{GHz}
Through (Male/Female) FMAD1131 ⁽¹⁾		
Minimum Frequency	0	Hz
Maximum Frequency	34	GHz
Length	0	mm
Loss	0.0065	dB/\sqrt{GHz}
Match (Male) FMTR1060		
Minimum Frequency	0	Hz
Maximum Frequency	34	GHz
Match (Female) FMTR1059		
Minimum Frequency	0	Hz
Maximum Frequency	34	GHz

Footnote 1: Precision Through Standards are contained in kit FMCK1020 only. For all kits, perform TOSM or SOLT calibrations using the "Unknown Through" method for best results.

Resources

Datasheets:

2.4mm Calibration Kits:

<https://www.fairviewmicrowave.com/images/ProductPDF/FMCK1019.pdf>

<https://www.fairviewmicrowave.com/images/ProductPDF/FMCK1020.pdf>

Torque Wrenches:

<https://www.fairviewmicrowave.com/images/ProductPDF/st-sma-516-bo8a.pdf>

Website:

Fairview Microwave Calibration Kits:

https://www.fairviewmicrowave.com/nsearch.aspx?Category=Calibration+Kits+Portable^Calibration+Kits^Calibration+Kits+Components&keywords=calibration+ports+vna&sort=y&searchtype=1&view_type=grid

Fairview Microwave Test and Measurement Products:

https://www.fairviewmicrowave.com/nsearch.aspx?Category=Calibration+Kits+Portable^Calibration+Kits^Calibration+Kits+Components^Adapters^Data+Cable+assemblies^Cable+assemblies^Connectors^VNA+Test+Cables&keywords=Banana+Alligator+Spade+Breakout+calibration+ports+vna+armored+test&searchtype=1&no_metaphones=0:1&sort=y&view_type=grid

Contacts

Customer Support & Sales

Fairview Microwave
301 Leora Ln., Suite 100
Lewisville, TX 75056
USA

Phone: (800) 715-4396
(972) 649-6678

Fax: (972) 649-6689

Sales Email: sales@fairviewmicrowave.com

Customer Support Email: tech_support@fairviewmicrowave.com

Website: <https://www.fairviewmicrowave.com>