



REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED
A	INITIAL RELEASE	09/13/2022	AGANWANI

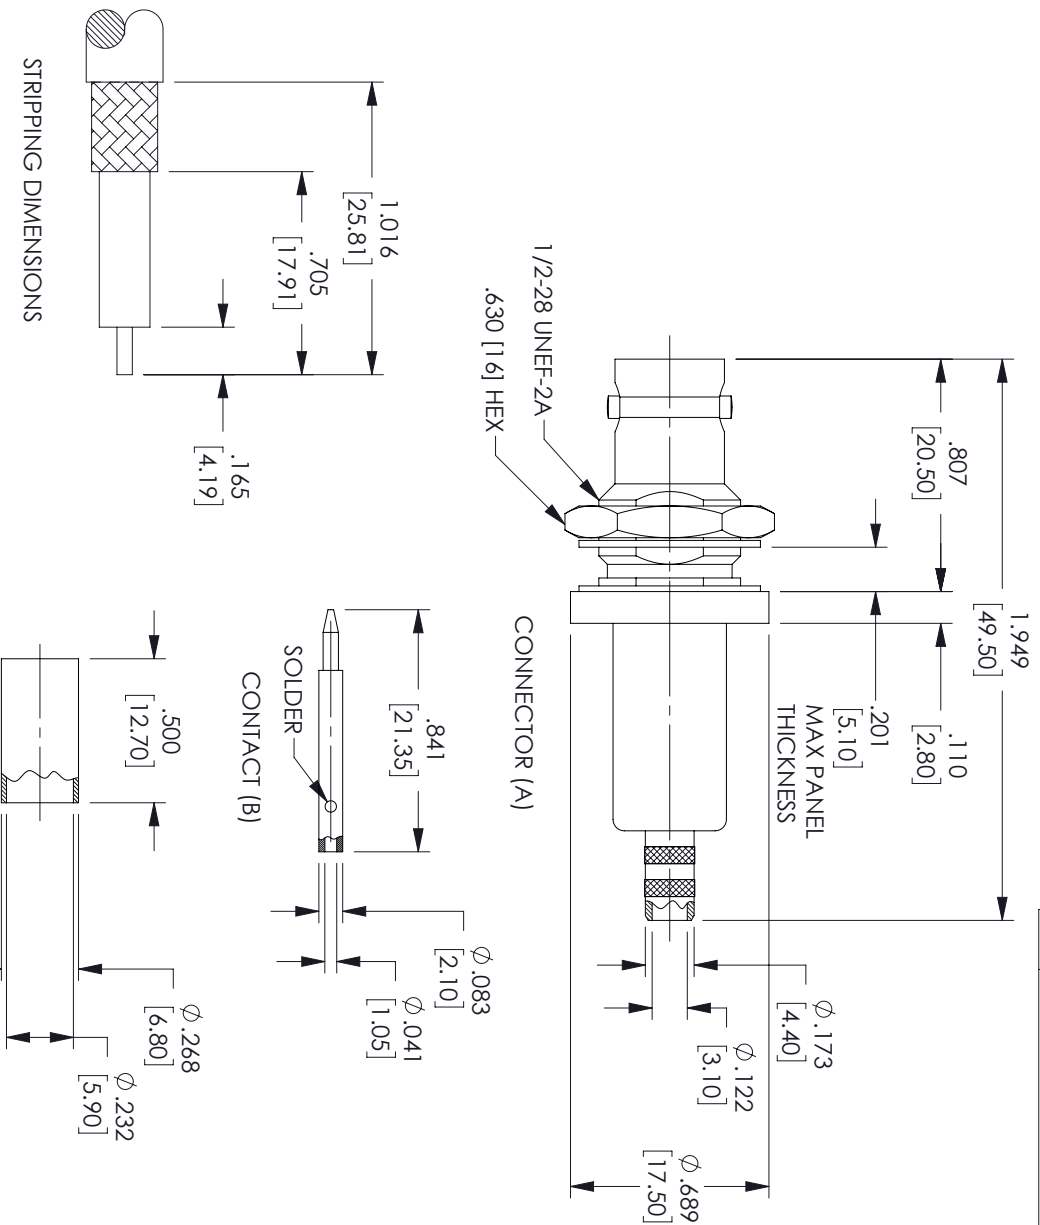

CRIMP SIZE REQUIRED
CONTACT: SOLDER
FERRULE: .232 [5.9] HEX CRIMP TOOL

- ASSEMBLY INSTRUCTIONS:**
1. STRIP THE CABLE AS SHOWN. DO NOT NICK CENTER CONDUCTOR.
 2. SLIDE THE FERRULE (C) OVER THE CABLE JACKET.
 3. PLACE THE CONTACT (B) ONTO THE CENTER CONDUCTOR. SOLDER CONTACT TO CENTER CONDUCTOR.
 4. LOOSEN THE CABLE BRAID, THEN SLIDE THE CONNECTOR (A) INTO PLACE. THE CABLE BRAID MUST OVERLAP THE KNURLED SECTION AT THE REAR END OF THE CONNECTOR (A).
 5. SLIDE THE FERRULE (C) OVER THE CABLE BRAID AND CRIMP IN PLACE.

THESE COMMODITIES, TECHNOLOGY OR SOFTWARE WERE EXPORTED FROM THE UNITED STATES IN ACCORDANCE WITH THE EXPORT ADMINISTRATION REGULATIONS, DIVERSION CONTRARY TO U.S. LAW PROHIBITED.

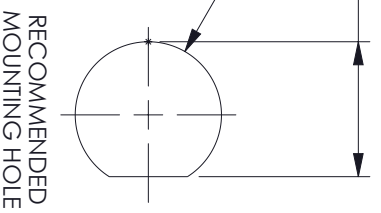

RECOMMENDED MOUNTING HOLE



Fairview Microwave
an INFINITI® brand

UNLESS OTHERWISE SPECIFIED LEADING DIMENSIONS ARE INCHES
DIMENSIONS IN [] ARE MILLIMETERS

TOLERANCES:

X = ±.2	[5.08]	FRACTIONS
XX = ±.02	[.51]	±.1/32
XXX = ±.005	[.13]	ANGLES ± 1°

THIRD-ANGLE PROJECTION

THE INFORMATION AND DESIGN IN THIS DOCUMENT IS THE PROPERTY OF FAIRVIEW MICROWAVE CORPORATION. ALL RIGHTS RESERVED.

ALL DIMENSIONS SHOWN ARE FOR REFERENCE ONLY.		SCALE	N/A
SIZE	CAGE CODE	ITEM NO.	REV
A	3FKRS	FMCN45859	A

DRAWN BY	AKRESOWSK
SHEET	1 OF 1